

VI.3.3B-SYSTEM-MDRGRID PPINIT COMMAND MDRGRID

Purpose

Command MDRGRID computes the grid point address of the grid point nearest the centroid of each MDR box. This information is needed by the MARO Preprocessor Function.

Command MDRGRID can be run once the general USER parameters (UGNL) and all of the grid boxes (DEFINE GRID) have been defined. It only needs to be rerun if the grid system or the MDR subset is changed.

Format

@MDRGRID