

### VI.3.3 PREPROCESSOR COMPONENT INITIALIZATION PROGRAM (PPINIT)

This Section describes the Preprocessor Component Initialization Program (PPINIT).

Section VI.3.4A [[Hyperlink](#)] includes a general description of PPINIT, the steps to follow for defining parameters and program execution information.

Section VI.3.4B [[Hyperlink](#)] includes a description of the PPINIT commands and syntax rules.

Section VI.3.4C [[Hyperlink](#)] describes some of the algorithms used by PPINIT to compute parametric values.

The contents of this Section is as follows:

<u>Subject</u>	<u>Section</u>
Introduction	VI.3.3A
Purpose	VI.3.3A
Parametric Data Types	VI.3.3A
Steps for Defining Parameters	VI.3.3A
Program Execution Information	VI.3.3A
PPINIT Commands and Syntax rules	VI.3.3B
DEFINE command	VI.3.3B-DEFINE
AREA parameters	VI.3.3B-DEFINE-AREA
BASIN parameters	VI.3.3B-DEFINE-BASIN
STATION parameters	VI.3.3B-DEFINE-STATION
USER parameters	VI.3.3B-DEFINE-USER
DELETE command	VI.3.3B-DELETE
AREA parameters	VI.3.3B-DELETE-AREA
BASIN parameters	VI.3.3B-DELETE-BASIN
STATION parameters	VI.3.3B-DELETE-STATION
DUMP command	VI.3.3B-DUMP
INCLUDE command	
NETWORK command	VI.3.3B-NETWORK
ORDER command	VI.3.3B-ORDER
SETOPT command	VI.3.3B-SETOPT
STATUS command	VI.3.3B-STATUS
STOP command	VI.3.3B-STOP
Description of Algorithms and Techniques	VI.3.3C
NWSRFS/HRAP Grid Coordinate System	VI.3.3C
Basin Boundary Definition	VI.3.3C
Station Weights	VI.3.3C
Radius of Influence	VI.3.3C
MDR Box Determination	VI.3.3C