## VI.3.3B-DEFINE PROGRAM PPINIT COMMAND DEFINE

## Purpose

Command DEFINE is used to:

- o define the parameters for a new area, basin or station or
- o redefine the parameters for an existing area, basin or station

## Format

{Input Data}

# Parameter Description

	<u>Parameter</u>	Required/ Optional	Maximum <u>Characters</u>	<u>Description</u>
	group	R	7	One of the following parameter group names:  o AREA o BASIN o GRIDBOX o RFROCNST o STATION o USER
	NEW	0		Indicates definition does not exist
	OLD	0		Indicates definition exists and is to be changed $\underline{1}/$
	CHECKREF	0	3	Option to check if station is referenced $\underline{2}/$
	PRNTPARM	0	3	Option to print parametric data during define or redefine
	PRNTNOTE	0	3	Option to print notes during define or redefine of stations
	PLOT	0	3	Option to plot parametric data
_			0 0	

	Required/	Maximum	
Parameter	<u>Optional</u>	<u>Characters</u>	Description

for MAP and MAT areas that use basin boundaries

#### Notes:

- $\underline{1}$ / When parameters for a group are being redefined, there may be some parameters whose value cannot be changed. Parameters that can have their value changed are indicated by a '#' in the input summary.
- $\underline{2}/$  If CHECKREF(NO) is specified the station will be redefined even if a data type is removed from the definition and it is used as:
  - o a significance PCPN station by another station
  - o a predetermined PCPN station by an MAP area
  - o a predetermined TEMP station by an MAT area
  - o a predetermined PE station by an MAPE area
  - o an RRS data type in the definition of a Segment that is part of a Carryover Group

### Input Data

The input data to the DEFINE command depends on the parameter group to be defined.

The input data are described in the following sections:

Group	<u>Section</u>
AREA	VI.3.3B-DEFINE-AREA
BASIN	VI.3.3B-DEFINE-BASIN
GBOX	VI.3.3B-DEFINE-GBOX
RFRO	VI.3.3B-DEFINE-RFRO
STATION	VI.3.3B-DEFINE-STATION
USER	VI.3.3B-DEFINE-USER