

Purpose

MOD ROCHNG changes values in the runoff time series input to the UNIT-HG Operation beginning with the date specified.

Format

Use Format B3 with two date on the command card.

```
.ROCHNG date [validdate] [ FGROUP ]  
identifier values [ / opname ]
```

where date is the date for which the MOD applies and must be greater than or equal to Technique STARTRUN
validdate is the date after which the MOD is no longer valid, is optional and is usually less than or equal to Technique LSTCMPDY
values are the runoff time series values

This MOD is only enabled if the date on the MOD card is less than or equal to validdate or Technique LSTCMPDY. If the date is greater than validdate then the change is made only if validdate is equal to Technique LSTCMPDY.

If validdate is not entered then the MOD is enabled as long as as the date is less than or equal to Technique LSTCMPDY.

Example

In this example runoff values are changed in two Segments just prior to the unit hydrograph being applied.

```
.ROCHNG 110913CDT 111013CDT  
RAPM5 .2 .5 .5 .1 5*0 .1 .2  
RPDM5 0 .2 .4 .3 5*0 .1 .1 .1
```