

Purpose

Technique PREADJ sets if Function ESP is to use the calibration input from directory (\$scalb_area_ts_dir)/pre.

This Technique should only be used in conjunction with the ensemble pre-processor.

Valid values are NO (0) and YES (1).

The global default value is NO (0).

This Technique is Universal.

Form of Input

PREADJ(integer)

where integer is 0 or 1 specifying whether or not to use the calibration input from directory (\$scalb_area_ts_dir)/pre:
0 = do not use
1 = use

Example

PREADJ(1)

ESP will use the input from the (\$scalb_area_ts_dir)/pre directory.