

Purpose

Technique PRNTFMAP sets whether FMAP time series are to be printed.

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Universal.

Form of Input

PRNTFMAP(integer)

where integer is either a 1 or 0 indicating whether or not to print
FMAP time series

Example

PRNTFMAP(1)

This will cause FMAP time series to be printed.