

VI.5.3D-PRTMAT PROGRAM FCST HCL TECHNIQUE PRTMAT

Purpose

Technique PRTMAT sets whether Mean Areal Temperature (MAT) values are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

PRTMAT(integer)

where integer is 1 or 0 specifying whether or not to print MAT values

Example

PRTMAT(1)
PRTMAT

The MAT values will be printed.