

Purpose

Technique RRSINMOB sets whether observed instantaneous miscellaneous data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSINMOB(integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSINMOB(1)

The observed instantaneous miscellaneous data will be printed for all stations that have observations during the run period.