

## VI.5.3D-SYSTEM-APIMAX PROGRAM FCST HCL TECHNIQUE APIMAX

### Purpose

Technique APIMAX sets the maximum API value beyond which grid point values will not be allowed to exceed for Function MARO.

Valid values are NO (0) and YES (1).

The Global default is YES (1).

This Technique is Universal.

The Technique has one Argument which is the maximum API value.

The Global default for the maximum API value is 5.00 inches.

### Form of Input

APIMAX(integer) max-api-value

where integer is 0 or 1 specifying whether APIMAX is off or  
on  
max-api-value is the maximum value of API (units of IN) for  
this run of Function MARO

### Example

APIMAX 7.00

The example will cause the maximum value of API (for this run only) to be 7.00 inches. Any values of API above 7.00 will be changed to 7.00 inches.