

Purpose

Technique FTWMDRDS sets if MDR can be used by Function MARO to determine the 6 hour distribution percentages at the MDR centroid grid points.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

FTWMDRDS(integer)

where integer is 0 or 1 specifying whether MDR can be used to compute 6 hour distribution percentages at the MDR centroid grid points

Example

FTWMDRDS

Technique FTWMDRDS will be turned on.

FTWMDRDS(0)

Technique FTWMDRDS will be turned off.