

Purpose

Technique PPPDB sets the debug level for the Preprocessor Parametric Data Base read/write routines.

Valid values are NO (0), YES (1) and other valid debug levels.

The Global default is NO (0).

This Technique is Universal.

Form of Input

PPPDB(integer)

where integer is the debug level

Example

PPPDB(2)

The debug level will be set to 2.