

Purpose

Technique PPPTR sets the trace level for the Preprocessor Parametric Data Base routines.

Valid values are NO (0), YES (1) and other valid trace levels.

The Global default is NO (0).

This Technique is Universal.

Form of Input

PPPTR(integer)

where integer is the trace level

Example

PPPTR(2)

The trace level will be set to 2.