

### VI.6.3-PPDUTIL-SYSTEM PROGRAM PPDUTIL SYSTEM COMMANDS

This Section describes the following program PPDUTIL system commands:

<u>Command</u>	<u>Purpose</u>
@CHNGSPEC	Change data type specifications [ <a href="#">Hyperlink</a> ]
@DEBUG	Set debug variables [ <a href="#">Hyperlink</a> ]
@DEFTYPE	Define data types [ <a href="#">Hyperlink</a> ]
@DELSTA	Delete stations [ <a href="#">Hyperlink</a> ]
@DELTYPE	Delete data types [ <a href="#">Hyperlink</a> ]
@NEWUSER	Change the name of the file set to be processed [ <a href="#">Hyperlink</a> ]
@PDFNDR	Print index information [ <a href="#">Hyperlink</a> ]
@DUMPSIF	Print Station Information File records [ <a href="#">Hyperlink</a> ]
@RESET	Reset Preprocessor Data Base in-use flag [ <a href="#">Hyperlink</a> ]
@RRSDUMP	List header, data and statistics for RRS station [ <a href="#">Hyperlink</a> ]
@ZERODATE	Set the first and last date of data to zero for each daily data type [ <a href="#">Hyperlink</a> ]
@ZERODLY	Set the first and last date of data to zero and initialize the data records for each daily data type [ <a href="#">Hyperlink</a> ]

The '@' in the command name is optional.