

VI.6.3-PPDUTIL-SYSTEM-PDFNDR PROGRAM PPDUTIL COMMAND PDFNDR

Purpose

Command PDFNDR prints index information for the specified stations in the Preprocessor Data Base.

Input Data

<u>Card</u>	<u>Field</u>	<u>Format</u>	<u>Contents</u>
1	1		'@PDFNDR'
	2+	A8	Station identifier

Example

```
@PDFNDR BEANC DBQ
```