VIII.3.3-RES-SNGL-S-PREL26 SUBROUTINE PREL26

<u>Description</u>

Subroutine PREL26 uses elevations from an observed/projected time series or a user-specified value to determine outflows.

<u>Calling Sequence</u>

CALL PREL26 (ELEVC, STOR, ELEV)

Argument List

Argument	Input/ Output	<u>Type</u>	<u>Dimension</u>	<u>Description</u>
ELEVC	Input	R*4	IOPT	Array of elevation values prior to and including the elevation at the beginning of the first time interval
STOR	Input	R*4	NSE	Storages for pool elevation versus storage relation
ELEV	Input	R*4	NSE	Pool elevations for elevation versus storage relation

Dimension variables are in common blocks PRES26 and RESV26.