

## IX.3.0B-SYSTEM-HGFNUM SUBROUTINE HGFNUM

### Description

Subroutine HGFNUM assigns an Hydrologic Command Language [[Hyperlink](#)] Function number to a Function which is being defined.

It first checks for a number from among the deleted Functions. If none is available then it assigns the next available number.

### Calling Sequence

CALL HGFNUM (IGL,IFNUM,ISTAT)

### Argument List

<u>Argument</u>	<u>Input/ Output</u>	<u>Type</u>	<u>Dimension</u>	<u>Description</u>
IGL	Input	I*4	1	Global/Local indicator: -1 = Global 1 = Local
IFNUM	Output	I*4	1	Function number
ISTAT	Output	I*4	1	Status code: 0 = normal return 1 = no available number 2 = system error