

## IX.3.0B-SYSTEM-HRDCTL SUBROUTINE HRDCTL

### Description

Subroutine HRDCTL reads the first record from the Hydrologic Command Language [[Hyperlink](#)] Local and Global definition files into common block HCNTL [[Hyperlink](#)].

### Calling Sequence

CALL HRDCTL (ISTAT)

### Argument List

| <u>Argument</u> | <u>Input/<br/>Output</u> | <u>Type</u> | <u>Dimension</u> | <u>Description</u>                                 |
|-----------------|--------------------------|-------------|------------------|--|
| ISTAT           | Output                   | I*4         | 1                | Status code:<br>0 = normal return<br>other = error |