

IX.3.3C-SYSTEM-FCONIT COMMON BLOCK FCONIT

Purpose

Common block FCONIT indicates whether the carryover values in the C array [[Hyperlink](#)] are initial values.

It is used to control the form of the output from the print carryover subroutine for Operations that can have default carryover values.

Listing

```
COMMON /FCONIT/ IVALUE
```

Description of Variables

<u>Variable</u>	<u>Type</u>	<u>Dimension</u>	<u>Word Position</u>	<u>Description</u>
IVALUE	I*4	1	1	Indicator whether the values in array C are initial values: 0 = not initial values 1 = initial values