

### IX.3.3C-SYSTEM-FSNWUP COMMON BLOCK FSNWUP

#### Purpose

Common block FSNWUP contains information used to determine whether snow water equivalent and areal extent of snow cover are adjusted when observed values are available or whether observed values are only to be used for making comparisons in Operations SNOW-17 [[Hyperlink](#)] and SNOW-31 [[Hyperlink](#)].

#### Listing

COMMON /FSNWUP/ IUPWE,IUPSC

#### Description of Variables

<u>Variable</u>	<u>Type</u>	<u>Dimension</u>	<u>Word Position</u>	<u>Description</u>
IUPWE	I*4	1	1	Water equivalent adjustment indicator: 1 = adjust 0 = do not adjust
IUPSC	I*4	1	2	Areal extent of snow cover adjustment indicator: 1 = adjust 0 = do not adjust