

IX.4.3C-URRS PREPROCESSOR PARAMETRIC DATA BASE PARAMETER ARRAY URRS:  
USER RIVER, RESERVOIR AND SNOW PARAMETERS

Purpose

Parameter array URRS contains general parameters used to define River, Reservoir and SNOW (RRS) stations.

Array Contents

<u>Starting Position</u>	<u>Dimension</u>	<u>Type</u>	<u>Input/ Generated</u>	<u>Description</u>
1	1	I*4	G	Parameter array version number
2	2	I*4	G	Unused
4	1	I*4	G	Number of RRS data type codes (NTYPE)
5	NTYPE	A4	I	RRS data type codes
5+NTYPE	NTYPE	I*4	I	Default minimum number of days of data to be retained in the Preprocessor Data Base
5+2*NTYPE	NTYPE	I*4	I	Default typical number of observations to be stored in the Preprocessor Data Base