

IX.4.7A-GDPM FFGS FILE /gdpm/id

Purpose

File /gdpm/id contains the grid runoff adjust parameters used to adjust threshold runoff values.

Description

FILE NAME: /gdpm/id

where id is a geo-boundary identifier

ATTRIBUTES: unformatted

RECORD STRUCTURE:

<u>Variable</u>	<u>Type</u>	<u>Dimension</u>	<u>Word Position</u>	<u>Description</u>
NP	I*4	1	1	Number of words in array
PO	R*4	NP	2	GDPM parameter array