

## IX.7.1B-SYSTEM-DUHED SUBROUTINE DUHED

### Description

Subroutine DUHED dumps parameters that define a headwater to a file in the format that can be used to define the parameters.

### Calling Sequence

call duhed (po,iout)

### Argument List

<u>Argument</u>	<u>Input/ Output</u>	<u>Type</u>	<u>Dimension</u>	<u>Description</u>
po	Input	R*4	*	Array containing parameters and computed flash flood guidance values for a headwater
iout	Input	I*4	1	Output device number